

BRADLEY HEATING/COOLING

GENERAL OVERVIEW

In Bradley, heating works differently than in residential homes where a thermostat can switch to heating or cooling at any time. In Bradley, the whole building's heat must be switched on or off all at once. Hot water is pumped through convector units near the window in your room for heat. Air-conditioning is provided in common areas such as dens, lounges, and kitchens. During heating season, our goal is to keep your room at a comfortable range from 65 – 75 °F. Having issues with the temperature of your room? Please submit a maintenance request at: mars.housing.wisc.edu.

GUIDELINES & HELPFUL HINTS

- Try small adjustments first to avoid overheating/cooling your room
- Make sure furniture, bedding, or belongings aren't pushed against convectors as this could block air flow
- During heating season, open curtains and blinds during the day when you are home to allow the sun to warm your room naturally, and close them at night to decrease drafts; during cooling season, do the reverse
- Keep doors and windows closed when the heat or air conditioning is on
- Dress for the season: instead of turning up the heat, use blankets and sweaters

HEATING CONTROLS

A control knob on the front of the convector must be turned to the left (*open*) so heat can freely pass through the convector (*see photo*).

COOLING CONTROLS

Window unit air-conditioners are provided in resident rooms for medical needs only. Air conditioners have separate digital or turn knob controls for fan speed and cooler/warmer air. For more information:

go.wisc.edu/housing-considerations

